



CODING TABLE

STAR RNAV CPN 2B RWY 35L/35R					SÃO PAULO / Congonhas (SBSP)							SBSP_STAR_01Z		05 NOV 20	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	ENTIT	N/A	N/A	ENTIT	IF	N/A	N/A	-27000	N/A	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	ENTIT	Y	N/A	OSAGI	TF	237.80° Mag 216.48° True	N/A	B24000	B21000	N/A	N/A	24.16	N/A	OTHER	RNAV 1 or RNP 1
30	ENTIT	N	N/A	CPN	TF	237.74° Mag 216.56° True	N/A	N/A	+16000	N/A	N/A	19.80	N/A	OTHER	RNAV 1 or RNP 1
10	UGOVU	N/A	N/A	UGOVU	IF	N/A	N/A	B20000	B19000	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	UGOVU	N	N/A	SP011	TF	128.46° Mag 107.41° True	N/A	-19000	N/A	N/A	N/A	7.00	N/A	OTHER	RNAV 1 or RNP 1
30	UGOVU	N	N/A	CPN	TF	128.47° Mag 107.29° True	N/A	N/A	+16000	N/A	N/A	18.71	N/A	OTHER	RNAV 1 or RNP 1
10	COMMON	N/A	N/A	CPN	IF	N/A	N/A	N/A	+16000	N/A	N/A	N/A	N/A	OTHER	RNAV 1 or RNP 1
20	COMMON	Y	N/A	UDUKA	TF	193.40° Mag 172.25° True	N/A	B13000	B10000	N/A	N/A	15.13	N/A	OTHER	RNAV 1 or RNP 1
30	COMMON	N	N/A	PANUG	TF	193.38° Mag 172.24° True	N/A	N/A	N/A	N/A	N/A	9.08	N/A	OTHER	RNAV 1 or RNP 1
40	COMMON	N	N/A	KOMGU	TF	146.00° Mag 124.79° True	N/A	-9000	N/A	N/A	N/A	16.27	N/A	OTHER	RNAV 1 or RNP 1
50	COMMON	N	N/A	SP019	TF	168.67° Mag 147.44° True	N/A	N/A	+8000	N/A	N/A	9.72	N/A	OTHER	RNAV 1 or RNP 1
60	COMMON	N	N/A	OGTAL	TF	168.64° Mag 147.40° True	N/A	N/A	+7000	N/A	N/A	10.94	N/A	OTHER	RNAV 1 or RNP 1
70	COMMON	N/A	N/A	OGTAL	FM	170.00° Mag 147.76° True	N/A	N/A	+7000	N/A	N/A	N/A	N/A	IAF	RNAV 1 or RNP 1

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
CPN	S 23:00:31.38W 47:07:44.56
ENTIT	S 22:25:03.04W 46:39:28.71
OSAGI	S 22:44:33.41W 46:54:58.95
UDUKA	S 23:15:33.97W 47:05:31.92
PANUG	S 23:24:35.44W 47:04:12.11
KOMGU	S 23:33:54.89W 46:49:40.64
SP019	S 23:42:08.28W 46:43:58.91
OGTAL	S 23:51:23.29W 46:37:33.47
UGOVU	S 22:52:50.03W 47:34:16.43
SP011	S 22:54:55.44W 47:27:05.30

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT