



## CODING TABLE

IAC VOR RWY 28					CRUZEIRO DO SUL / Cruzeiro do Sul, INTL (SBCZ)							SBCZ_IAC_00D		03 DEC 20	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST (NM)	VA (°)	Role of the Fix	Navigation Specification
10	APCH	N/A	N/A	CZS	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	CZS	CZS	FC	105.07° Mag	N/A	N/A	+2300	210	-	9.0	N/A	OTHER	N/A
30	APCH	N/A	CZS	AKPID	CF	265.06° Mag	L	N/A	R2280	N/A	N/A	N/A	N/A	FAF	N/A
10	FINAL	N/A	N/A	AKPID	IF	N/A	N/A	N/A	R2280	N/A	N/A	N/A	N/A	FAF	N/A
20	FINAL	N/A	CZS	CZ021*	CF	265.09° Mag	N/A	N/A	@686	N/A	N/A	5.0	-3.00	FTP	N/A
10	MA	N/A	N/A	N/A	VA	265.14° Mag	N/A	N/A	+2000	220	-	N/A	N/A	N/A	N/A
20	MA	N/A	N/A	CZS	DF	N/A	R	N/A	+3000	220	-	N/A	N/A	MAHF	N/A
30	MA	N/A	CZS	CZS	HM	105.07° Mag	R	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

\* Fictitious point = for coding purpose only.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
VOR CZS	S 07:36:24.47W 72:46:24.49
AKPID	S 07:35:13.48W 72:40:34.35
CZ021	S 07:36:13.51W 72:45:30.40

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT