



CODING TABLE

IAC ILS U OR LOC U RWY 08					BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)							SBBV_IAC_001		10 OCT 19	
Seq Num	Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role of the Fix	Navigation Specification
10	APPROACH	N	N/A	MIMIS	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	---
20	APPROACH	N	N/A	BVI01*	AF	203.88° Mag	R	N/A	+2500	N/A	N/A	N/A	N/A	OTHER	---
30	APPROACH	N	IBV	VULOT	CF	78.49° Mag 63.00° True	N/A	N/A	+2500	N/A	N/A	1.95	N/A	IF	---
10	APPROACH	N	BVI	SUNDU	IF	N/A	N/A	N/A	+4000	N/A	N/A	N/A	N/A	IAF	---
20	APPROACH	N	N/A	BVI01*	AF	313.01° Mag	L	N/A	+2500	N/A	N/A	N/A	N/A	OTHER	---
30	APPROACH	N	IBV	VULOT	CF	78.49° Mag 63.00° True	N/A	N/A	+2500	N/A	N/A	1.95	N/A	IF	---
10	FINAL	N	N/A	VULOT	IF	N/A	N/A	N/A	+2500	N/A	N/A	N/A	N/A	IF	---
20	FINAL	N	IBV	ABREU	CF	78.53° Mag 63.01° True	N/A	N/A	+1910	N/A	N/A	5.00	N/A	FAF	---
30	FINAL	N	IBV	BVI06*	CF	78.53° Mag 63.01° True	N/A	N/A	+1020	N/A	N/A	2.84	-3.00	SDF	---
40	FINAL	Y	IBV	RWY08	CF	78.57° Mag 63.01° True	N/A	N/A	@310	N/A	N/A	2.16	-3.00	LTP/FTP	---
10	MA	N	N/A	N/A	VA	78.57° Mag 63.01° True	N/A	N/A	+1500	N/A	-230	N/A	N/A	---	---
20	MA	N	N/A	N/A	VI	260° Mag	L	N/A	+4000	N/A	-230	N/A	N/A	---	---
30	MA	N	BVI	SUNDU	CF	312.90° Mag 297.43° True	R	N/A	+4000	N/A	N/A	N/A	N/A	MAHF	---
40	MA	Y	BVI	SUNDU	HM	132.90° Mag 117.43° True	L	N/A	+4000	N/A	N/A	N/A	N/A	MAHF	---

* Fictitious point = for coding purpose only.

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
SUNDU	N 02:57:08.75W 60:52:44.70
BVI01	N 02:44:59.86W 60:52:41.24
BVI06	N 02:49:27.83W 60:43:58.46
MIMIS	N 02:38:11.98W 60:43:05.55
VULOT	N 02:45:53.27W 60:50:57.36
ABREU	N 02:48:10.11W 60:46:30.22

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT
N/A	NOT APPLICABLE
LTP	LANDING THRESHOLD POINT
FTP	FICTITIOUS THRESHOLD POINT