



## CODING TABLE

IAC NDB Z RWY 05					ITAITUBA / Itaituba (SBIH)							SBIH_IAC_00B		31 DEC 20	
Seq Num	IAP Transition Identifier	Fly Over	Rec Navaid	Fix Ident	Path and Terminator	Course Angle	Turn	Upper Limit Altitude (FT)	Lower Limit Altitude (FT)	Speed Limit (KT)	Speed Limit Description	TM DST	VA (°)	Role Of TheFix	Navigation Specification
10	APCH	N/A	N/A	YUB	IF	N/A	N/A	N/A	+3000	N/A	N/A	N/A	N/A	IAF	N/A
20	APCH	N/A	YUB	YUB	FC	245.27° Mag 227.17° True	N/A	N/A	+1600	210	-	2 min 20 s	N/A	OTHER	N/A
10	FINAL	N/A	YUB	YUB02*	CF	44.00° Mag 25.91° True	L	N/A	@142	N/A	N/A	N/A	N/A	FTP	N/A
10	MA	N/A	N/A	N/A	CA	44.00° Mag 25.91° True	N/A	N/A	+1500	210	-	N/A	N/A	N/A	N/A
20	MA	N/A	N/A	YUB	DF	N/A	R	N/A	N/A	210	-	N/A	N/A	MAHF	N/A
30	MA	N/A	YUB	YUB	HM	245.27° Mag 227.17° True	R	N/A	+3000	N/A	N/A	1.00 min	N/A	MAHF	N/A

(\* ) Fictitious Point = Only for coding purpose

Ident	Latitude / Longitude (WGS84) DD:MM:SS.SS
NDB YUB	S 04:14:25.80W 56:00:16.80
YUB02	S 04:14:47.27W 56:00:27.19

COD	Meaning
+	AT OR ABOVE
-	AT OR BELOW
@	AT
R	RECOMMENDED
B	BETWEEN
=	AS ASSIGNED
SDF	STEPDOWN FIX
Y	YES
N	NO
L	LEFT
R	RIGHT